

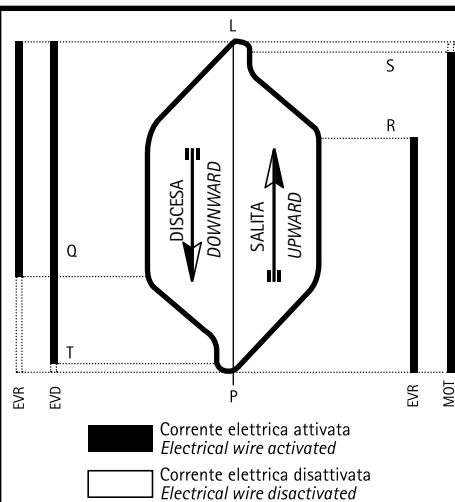


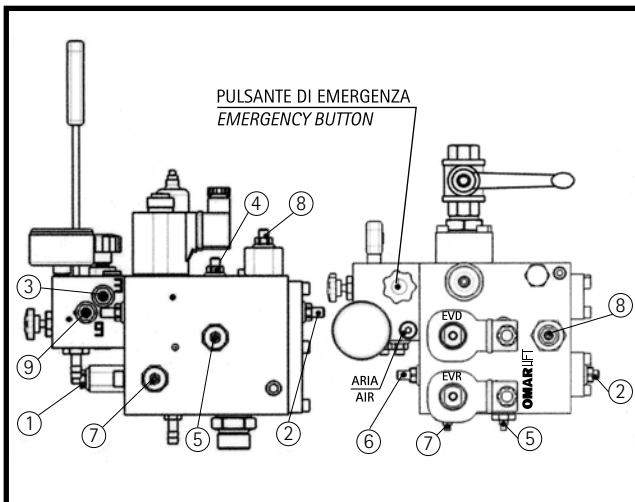

- 1 - TARATURA VALVOLA MASSIMA PRESSIONE
 - 2 - REGOLAZIONE BASSA VELOCITÀ
 - 3 - REGOLAZIONE CONTROPRESSIONE ED ANTISCARRUCOLAMENTO FUNI
 - 4 - PROVA VALVOLA DI BLOCCO
 - 5 - STROZZATORE RALLENTAMENTO DA ALTA A BASSA VELOCITÀ
 - 6 - LIMITATORE VELOCITÀ SALITA
 - 7 - STROZZATORE MESSA IN PRESSIONE E PARTENZA IN SALITA
 - 8 - REGOLAZIONE VELOCITÀ DI DISCESA
 - 9 - TARATURA PRESSIONE POMPA A MANO
- EVR - ELETTROVALVOLA RALLENTAMENTO
 EVD - ELETTROVALVOLA DISCESA
 R - PUNTO DI RALLENTAMENTO SALITA
 S - PUNTO DI FERMATA IN SALITA
 Q - PUNTO DI RALLENTAMENTO IN DISCESA
 T - PUNTO DI FERMATA IN DISCESA
 L - PIANO SUPERIORE
 P - PIANO INFERIORE

- 1 - ADJUSTING OF THE VALVE MAX PRESSURE
 - 2 - UPWARD AND DOWNWARD LOW SPEED REGUL.
 - 3 - ROD COUNTER-PRESSURE AND ROPE ANTI-LOOSENING AND DEVICE ADJUSTING
 - 4 - SCREW DEVICE FOR RUPTURE VALVE TESTING
 - 5 - CHOKE DEVICE FOR THE DECLERATION FROM HIGH TO LOW SPEED IN UPWARD AND DOWNWARD DIRECTIONS
 - 6 - HIGH SPEED LIMITER
 - 7 - CHOCKE DEVICE FOR PRESSURE ACTIVATION AND UPWARD START
 - 8 - DOWN HIGH SPEED REGULATOR
 - 9 - HAND PUMP PRESSURE ADJUSTING
- EVR - SLOWING ELECTROVALVE
 EVD - DOWN ELECTROVALVE
 R - UP SLOWING POINT
 S - UP STOP POINT
 Q - DOWN STOP POINT
 T - DOWN STOP POINT
 L - UPPER FLOOR
 P - LOWER FLOOR

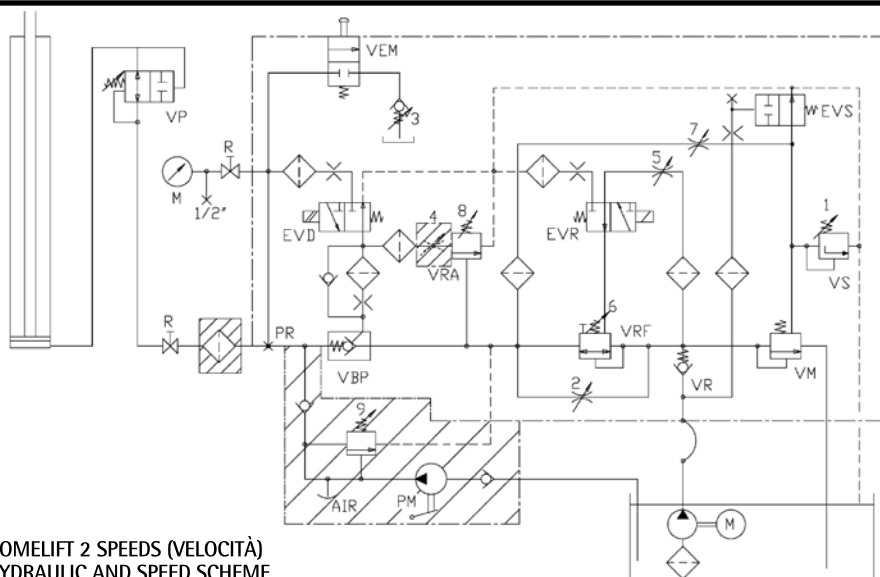


HOMELIFT 2 SPEEDS (VELOCITÀ)
HYDRAULIC AND SPEED SCHEME



OMARLIFT

Via F.lli Kennedy 22/D
 I - 24060 Bagnatica (BG) - ITALY
 Tel. +39 035 68.96.11 - Fax +39 035 68.96.71

Cod.8H200980